



# USER MANUAL

The manufacturer reserves the right to make changes to the miniPRO, release firmware updates, and update this manual at any time. Visit [www.segway.com](http://www.segway.com) to download the latest user materials and watch the safety video. You must install the Ninebot by Segway App to follow the New Rider Tutorial, activate your miniPRO, and obtain the latest updates and safety instructions.

[www.segway.com](http://www.segway.com)

25018-00001 ac

Go to [www.segway.com](http://www.segway.com) to watch the safety video.

Rendez-vous sur [www.segway.com](http://www.segway.com) pour télécharger le manuel d'utilisation.

Vaya a [www.segway.com](http://www.segway.com) para descargar el manual del usuario.

Visite [www.segway.com](http://www.segway.com) para baixar o manual do usuário.

## NOTE

You must first download the Ninebot by Segway App on your mobile device. The App will lead you through the New Rider Tutorial. For your safety, the miniPRO will limit the max speed to 4.3 mph (7 km/h) until you have completed the New Rider Tutorial. After completing the New Rider Tutorial, the max speed will be limited to 6.2 mph (10 km/h) during the first 0.6 miles (1 km), after which you will be allowed to disable the speed limiter via the App and reach a max speed of 10 mph (16 km/h).


# Contents

1 Packing List .....	01
2 Riding Safety .....	02
3 Diagram .....	04
4 Dashboard Icons .....	05
5 Assembling Your miniPro .....	06
6 First Ride .....	07
7 Charging .....	08
8 Learning to Ride .....	08
9 Warning .....	10
10 Remote Control (R/C) Mode .....	12
11 Lifting and Power Assist Mode .....	13
12 Maintenance .....	14
13 Specifications .....	16
14 Trademark and Legal Statement .....	17
15 Certifications .....	18
16 Contact .....	19

# Thanks for choosing the miniPRO!

Thanks for choosing the Ninebot by Segway miniPRO (hereinafter referred to as miniPRO)!  
Your miniPRO is a revolutionary electric balancing vehicle featuring a mobile device application.

Enjoy your ride!

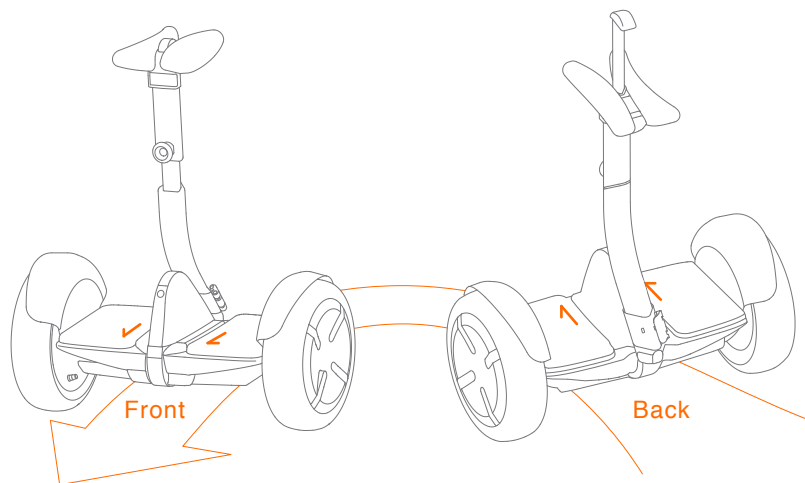


## ⚠ WARNING


Always step on/off from the back of the miniPRO.  
Otherwise you risk falls and/or collisions because the steering direction is reversed.

## 1 Packing List

### Steering Bar

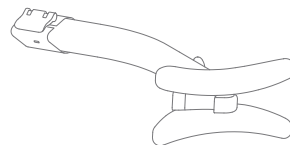


### Mainframe

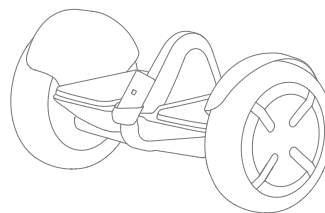

### User Materials




### Accessories Box

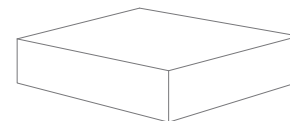

### Accessories in the Box

#### Charger, Power Cord

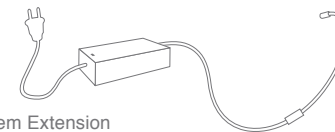

#### Valve Stem Extension



When unpacking your miniPRO, please verify that the above items are included in the package. If you are missing any components, please contact your dealer/distributor or email [technicalsupport@segway.com](mailto:technicalsupport@segway.com). After verifying that all components are present and in good condition, you can assemble your new miniPRO.

Please retain the box and packaging materials in case you need to ship your miniPRO in the future.


Remember to power off your miniPRO and unplug the charge cable before assembling, mounting accessories, or cleaning the mainframe.

## 2 Riding Safety



1. The miniPRO is a recreational product, which is different from motor vehicles driven on the road. Before mastering riding skills, you need to practice. Neither Ninebot Inc. nor Segway Inc. is responsible for any injuries or damage caused by a rider's inexperience or failure to follow the instructions in this document.
2. Please understand that you can reduce the risk by following all the instructions and warnings in this manual, but you cannot eliminate all the risks. Remember that whenever you ride the miniPRO you risk injury or death from loss of control, collisions, and falls. When entering into public spaces always comply with the local laws and regulations. As with other vehicles, faster speeds require longer braking distance. Sudden braking on smooth surfaces could lead to wheel slip, loss of balance, or falls. Be cautious and always keep a safe distance between you and other people or vehicles when riding. Be alert and slow down when entering unfamiliar areas.
3. Respect pedestrians by always yielding the right of way. Pass on the left whenever possible. When approaching a pedestrian from the front, stay to the right and slow down. Avoid startling pedestrians. When approaching from behind, announce yourself and slow down to walking speed when passing.
4. In places without laws and regulations governing self-balancing electric vehicles, comply with the safety guidelines outlined in this manual. Neither Ninebot Inc. nor Segway Inc. is responsible for any property damage, personal injury/death, accidents, or legal disputes caused by violations of the safety instructions.
5. Do not allow anyone to ride the miniPRO on his/her own unless they have carefully read this manual, watched the safety video, and followed the New Rider Tutorial on the Ninebot by Segway App. The safety of new riders is your responsibility. Spot new riders until they are comfortable with the basic operation of the miniPRO. Make sure each new rider wears a helmet and other protective gear.
6. Before each ride check for loose fasteners, damaged components, and low tire pressure. If the miniPRO makes abnormal sounds or signals an alarm, immediately stop riding. Diagnose your miniPRO via the Ninebot by Segway App and call your dealer/distributor for service.
7. Always wear a helmet when riding. Use an approved bicycle or skateboard helmet that fits properly with the chin strap in place, and provides protection for the back of your head.
8. Do not attempt your first ride in any area where you might encounter children, pedestrians, pets, vehicles, bicycles, or other obstacles and potential hazards.



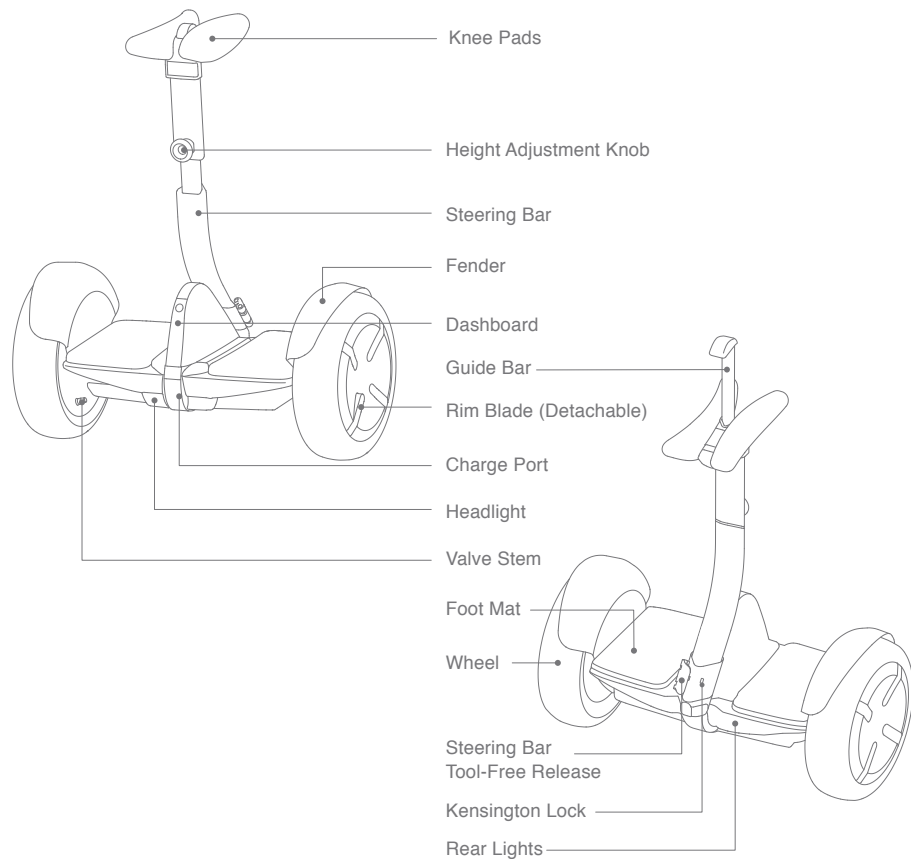


9. Be alert! Scan both far ahead and in front of your miniPRO — your eyes are your best tool for safely avoiding obstacles and low traction surfaces (including, but not limited to, wet ground, loose sand, loose gravel, and ice).
10. To reduce risk of injury, you must read and follow all "CAUTION" and "WARNING" notices in this document. Do not ride at an unsafe speed. Under no circumstance should you ride on roads with motor vehicles. Always follow these safety instructions:
  - A. The following people should not ride the miniPRO:
    - i. Anyone under 16 years old or above 60 years old. Riders between 16-18 years old should ride under adult supervision.
    - ii. Anyone under the influence of alcohol or drugs.
    - iii. Anyone who suffers from disease that puts them at risk if they engage in strenuous physical activity.
    - iv. Anyone who has problems with balance or with motor skills that would interfere with their ability to maintain balance.
    - v. Anyone whose height or weight is outside the stated limits (see Specifications).
  - B. Comply with local laws and regulations when riding this product. Do not ride where prohibited by local laws.
  - C. To ride safely, you must be able to clearly see what is in front of you and you must be clearly visible to others.
  - D. Do not ride in the snow, in the rain, or on roads which are wet, muddy, icy, or that are slippery for any reason. Do not ride over obstacles (sand, loose gravel, or sticks). Doing so could result in a loss of balance or traction and could cause a fall.
  - E. Do not accelerate or decelerate suddenly. Do not accelerate when the miniPRO tilts back or sounds an alarm. Do not attempt to override the speed limiter.
11. Do not insert the power cord if the charge port is wet.
12. Use a surge protector when charging to help protect your miniPRO from damage due to power surges and voltage spikes. Only use the Ninebot by Segway supplied charger. Do not use a charger from any other product.
13. Use only Ninebot by Segway approved parts and accessories. Do not modify your miniPRO. Modifications to your miniPRO could interfere with the operation of the miniPRO, could result in serious injury and/or damage, and could void the Limited Warranty.
14. Do not sit on the steering bar. Doing so could result in serious injury and/or damage to your miniPRO.

### 3 Diagram

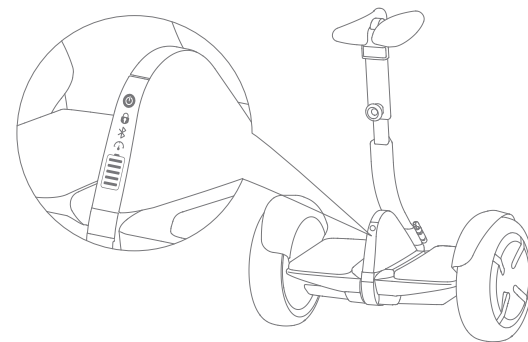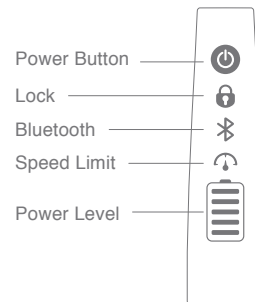

### 4 Dashboard Icons




	<b>Power Button</b>	Turn ON/OFF. The miniPRO will automatically power OFF when idle for 10 minutes, or when laid down (horizontal) for over 30 seconds.
	<b>Lock</b>	Enable Lock Mode via the App. The miniPRO will vibrate, flash its lights, and sound an alarm if anyone moves it. The App will also alarm. The miniPRO will not balance in Lock Mode.
	<b>Bluetooth</b>	When Bluetooth is enabled but not connected to a smart phone, this icon will blink. When the Ninebot by Segway App is connected to the miniPRO, this icon will glow steadily.
	<b>Speed Limit</b>	Enable and adjust Speed Limit Mode via the App. When the icon is illuminated the miniPRO is limited to 4.3 mph (7 km/h). This speed limit can be adjusted in the App. As you approach the speed limit, the miniPRO tilts back.
	<b>Power Level</b>	Indicates the remaining battery life. When the battery is nearly empty this icon blinks and the miniPRO beeps, indicating that you need to charge your miniPRO. When less than 30%, your miniPRO will gradually reduce the max speed limit. Use the App to read the remaining power and estimated remaining range.

## 5 Assembling Your miniPRO

### Install the steering bar


- 1 Open the tool-free release as shown.
- 2 Insert the steering bar into the mainframe steering socket.
- 3 Close the tool-free release to secure.

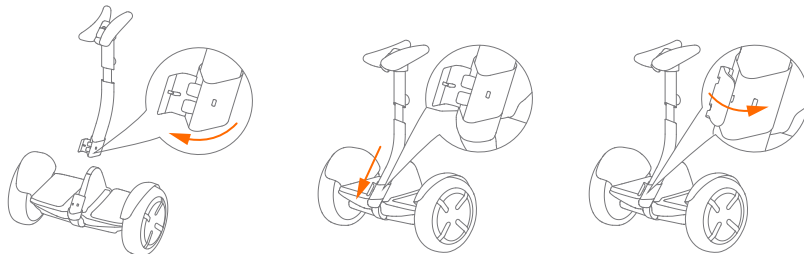

Check the Power ON/OFF status after assembly.

⚠ **For your safety, your miniPRO is not activated at this time** and will beep occasionally after Power ON. Until activated, the miniPRO maintains a very low riding speed and steering sensitivity, and should not be ridden. Install the Ninebot by Segway App on your mobile device (with Bluetooth 4.0 or above), connect to the miniPRO with Bluetooth, and follow the App instructions to activate your miniPRO and follow the training procedures.

### Adjust the knee pad height

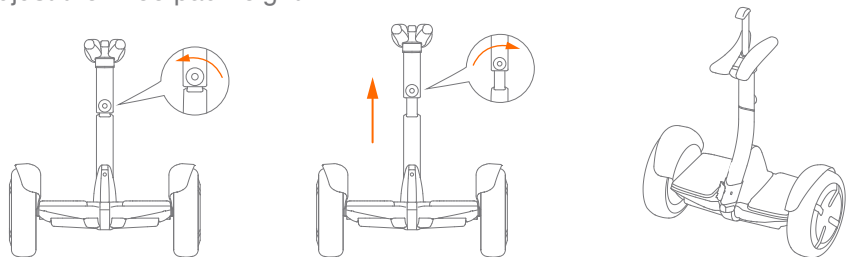

Rotate height adjustment knob counter-clockwise.

Lift the knee pads to desired height. Rotate height adjustment knob clockwise to tighten.

Lift the guide bar to help steer the miniPRO without a rider when powered on. Do not use to lift or carry the miniPRO.

## 6 First Ride

⚠ There are safety risks when learning to ride the miniPRO. You must read the Safety Instructions and follow the New Rider Tutorial in the Ninebot by Segway App before your first ride. Go to [www.segway.com](http://www.segway.com) to watch the safety video.



Android




iOS


Use your mobile device (Android or iOS) to install the Ninebot by Segway App, read the Safety Instructions, then follow the New Rider Tutorial before your first ride. Go to the Apple App Store (iOS) or the Google Play Store (Android) and search for "Ninebot" to download and install the App.

**Scan to download the App (iOS 5 or above, Android 4.3 or above)**

When your miniPRO intermittently sounds an alarm, stop riding and check the App for details.

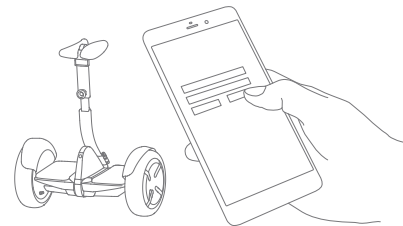


- 1 Install App and register/login.

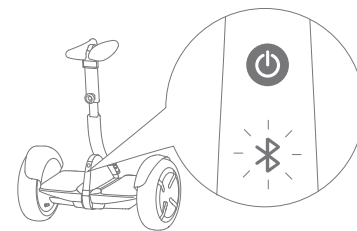

- 2 Power ON the miniPRO. The Bluetooth icon blinking indicates the miniPRO is waiting for a connection.


- 3 Click "Search device" to connect to your miniPRO. The miniPRO will beep when the connection is successful. The Bluetooth icon will stop blinking and remain illuminated.

Follow the App instructions to learn how to ride safely. Have fun!

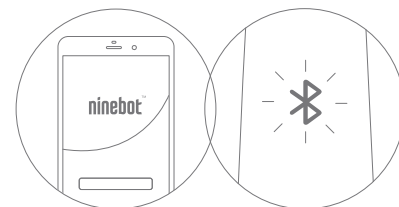

## 7 Charging

⚠ Do not connect the charger if the charge port or charge cable is wet.

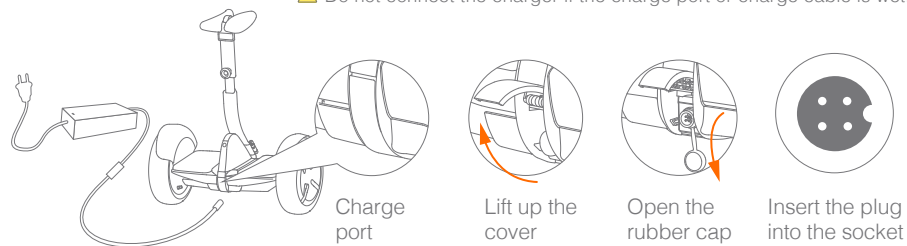

Your miniPRO is fully charged when the LED on the charger changes from red (charging) to green (trickle charge).

## 8 Learning to Ride

### ⚠ WARNING

Rider must weigh 85–220 lbs (40–85 kg) and must be 4'3"–6'6" (130–200 cm) tall.




Wear an approved helmet and other protective gear to minimize any possible injury.

After activation, the App will lead you through the New Rider Tutorial. Please follow the instructions in the App and in this manual.

### NOTE

You must first download the Ninebot by Segway App on your mobile device. The App will lead you through the New Rider Tutorial.


For your safety, the miniPRO will limit the max speed to 4.3 mph (7 km/h) until you complete the New Rider Tutorial. For the first 0.6 miles (1 km) after completing the New Rider Tutorial, the max speed will be limited to 6.2 mph (10 km/h), after which you can disable the speed limiter via the App and reach a maximum speed of 10 mph (16 km/h).

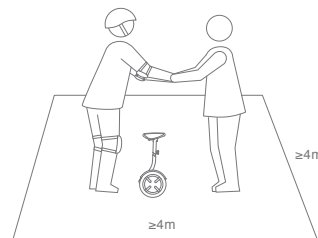


- 1 Go to a large open area and ask a friend to assist you on your first ride.

### ⚠ WARNING


Always step on from the back of the miniPRO.

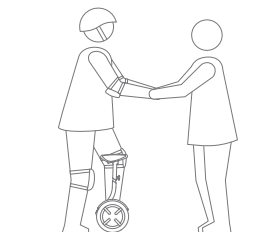


- 2 Place one foot on the foot mat, with your other foot still on the ground holding your weight. Do not press the steering bar with your leg.

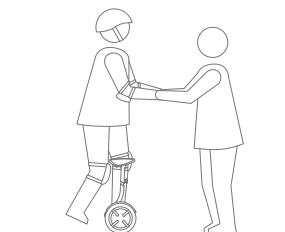


- 3 Slowly transfer your weight onto the miniPRO. The unit will beep, indicating it is now in balance mode. Slowly step on with your other foot.

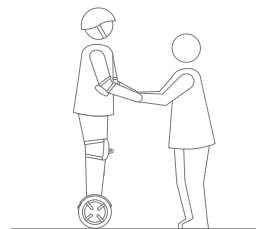

- 4 Stand with your weight evenly distributed on both feet and relax, looking straight ahead.

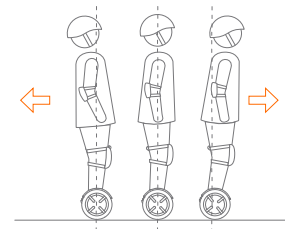


- 5 Gently lean your body forward and backward to control your movement.

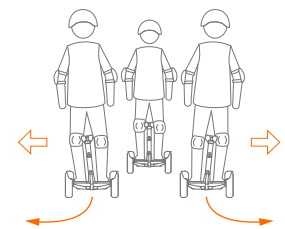


- 6 To turn, gently lean left or right against the steering bar.

## ⚠ Warning


You must read and understand the Warnings and Safe Riding instructions in this manual before attempting to ride the miniPRO.

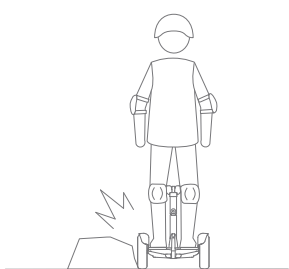


⚠ Avoid contacting obstacles with the tire/wheel.

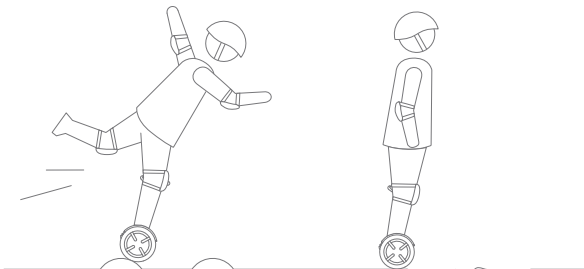


⚠ When traversing small bumps or uneven terrain, maintain a moderate speed 2-6 mph (3-10 km/h) and keep your knees bent. Do not go too slow or too fast; otherwise you may lose control and fall.

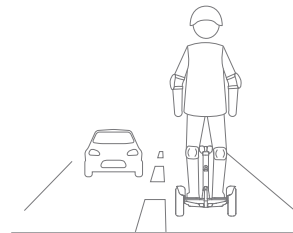


⚠ Do not ride on public roads, motorways, highways, or streets.

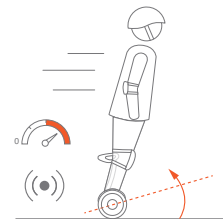


⚠ Do not accelerate when the miniPRO tilts back or sounds an alarm. Do not attempt to override the speed limiter.

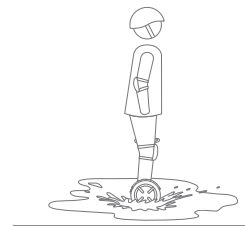


⚠ Do not ride through puddles or other bodies of water. Do not get wet.

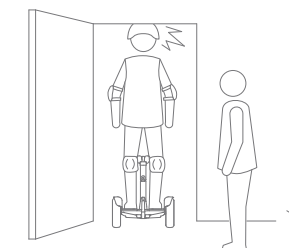


⚠ Watch your head when passing through doorways.

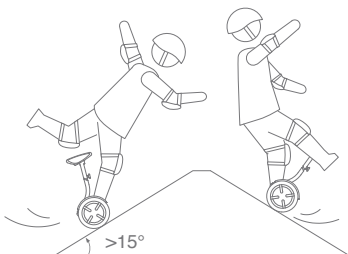


⚠ Avoid slopes steeper than 15° or you may lose traction.

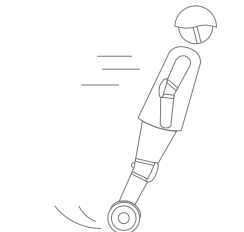


⚠ Do not accelerate or decelerate abruptly. Do not lean more than 5° or accelerate/decelerate faster than 2.5 mph/s (4 km/h/s).

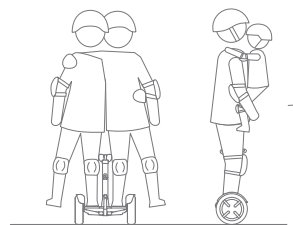

⚠ The miniPRO is for one rider only. Do not ride double or carry any passengers. Do not carry a child.

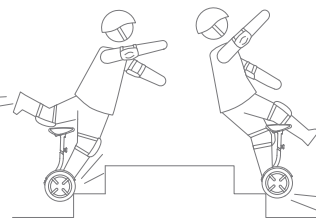

⚠ Do not ride over holes, curbs, steps, or other obstacles.

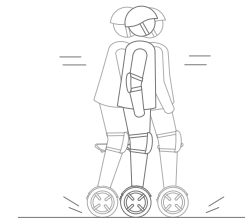


⚠ Do not rock back and forth or shift your weight abruptly.



## ⚠ Warning (cont'd)


You must read and understand the Warnings and Safe Riding instructions in this manual before attempting to ride the miniPRO.

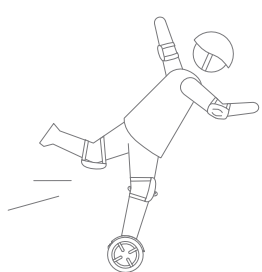

⚠ Do not attempt stunts of any kind. Always keep both feet on the foot mats.



⚠ Maintain contact with the ground at all times. Do not jump or attempt stunts.

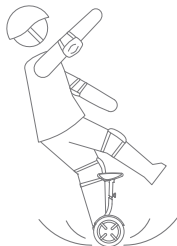

⚠ Do not ride on low traction surfaces (including, but not limited to, wet ground, loose sand, loose gravel, and ice).

## 10 Remote Control (R/C) Mode

You can use the Ninebot by Segway App to drive your miniPRO in R/C Mode.

1. Open the Ninebot by Segway App and connect to your miniPRO.
2. Click on the R/C icon (🔊).
3. Drag the virtual joystick (the dot inside the circle) to drive your miniPRO.

### ⚠ WARNING

Do not use R/C mode in crowded areas or where there is a potential risk of endangering people or property if operated in an unsafe manner. Do not stand on the miniPRO when it is in R/C mode. Doing so risks serious personal injury or damage to the miniPRO.

### NOTE



In R/C mode the default maximum speed is 4.3 mph (7.0 km/h), but you can change the max speed in the Ninebot by Segway App. The miniPRO's Bluetooth range is 30-50 feet (10-15 meters). If your Android or iOS device goes outside Bluetooth range, the miniPRO will stop moving in R/C mode.

## 11 Lifting and Power Assist Mode




### Lifting

For your safety, motor power is cut off when the miniPRO is lifted off the ground in Balance Mode. When the miniPRO is put back down it will begin balancing again. Do not lift the miniPRO by the fenders or mainframe; you risk pinching or injuring your fingers/hands. Please lift via the steering bar as shown above.

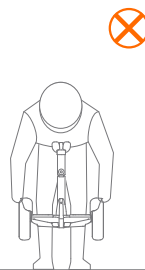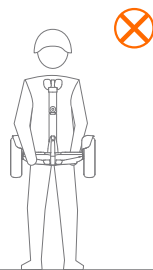

### Power Assist Mode

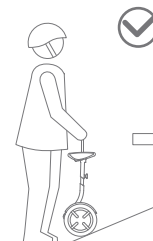

Pull up the guide bar to enter Power Assist Mode (powered on, with no rider). Steer the miniPRO across smooth surfaces using the guide bar. Do not guide it up stairs, across potholes, over large cracked/uneven surfaces, or over other obstacles; guide your miniPRO around the obstacle or carry it over the obstacle as shown in the previous section.

## 12 Maintenance

### Cleaning and Storing Your miniPRO

Use a soft, wet cloth to wipe the mainframe clean. Hard to remove dirt can be scrubbed with a toothbrush and toothpaste, then cleaned with a soft, wet cloth. Scratches on plastic parts can be polished with extra fine grit abrasive paper.

#### NOTE

Do not wash your miniPRO with alcohol, gasoline, acetone, or other corrosive/volatile solvents. These substances may damage the appearance and internal structure of your miniPRO. Do not wash your miniPRO with a power washer or high pressure hose.

#### ⚠ WARNING

Make sure the miniPRO is powered OFF, the charging cable is unplugged, and the rubber cap on the charge port is tightly sealed before cleaning; otherwise you may expose yourself to electric shock or damage the electronic components.

Store your miniPRO in a cool, dry place. Do not store it outdoors for extended periods of time. Exposure to sunlight and temperature extremes (both hot and cold) will accelerate the aging process of the plastic components and may reduce battery life.

#### Tire Pressure

Inflate tires to 45–50 psi. Inflate both tires equally.

### Battery Pack Maintenance

Do not store or charge the battery at temperatures outside the stated limits (see Specifications). Do not discard or destroy the battery. For more battery information, refer to the sticker on the battery itself, located on the bottom of the miniPRO. Refer to your local laws and regulations regarding battery recycling and/or disposal.

A well maintained battery can perform well even after many miles of riding. Charge the battery after each ride and avoid draining the battery completely. When used at room temperature (70°F [22°C]) the battery range and performance is at its best; whereas using it at temperatures below 32°F (0°C) can decrease range and performance. Typically, at -4°F (-20°C) range can be half that of the same battery at 70°F (22°C). Battery range will recover when temperature rises. More details are available in the App.

#### NOTE

Typically, a fully charged battery should retain charge for 120-180 days in Standby Mode. A low-power battery should retain charge for 30-60 days in Standby Mode. Remember to charge the battery after each use. Completely draining the battery may cause permanent damage to the battery. Electronics inside the battery record the charge-discharge condition of the battery; damage caused by over-discharge or under-discharge will not be covered by the Limited Warranty.

#### ⚠ WARNING

Risk of fire. No user serviceable parts. Do not attempt to disassemble the battery.

#### ⚠ WARNING

We strongly recommend against riding when the ambient temperature is below 23°F (-5°C) because low temperature will limit the maximum power/torque. Doing so could cause personal injury or property damage due to slips or falls.

## 13 Specifications

Index	Items	N3M320 Parameters
Dimensions	Length × Width	10.3 × 21.5 in (262 × 546 mm)
	Mainframe Height <sup>1</sup>	20–34 in (611–866 mm)
Weight	Payload	85–220 lbs (40–85 kg)
	Net	~ 28 lbs (12.8 kg)
Rider Requirements	Applicable Age	16–60 yrs
	Applicable Height	4'3"–6'6" (130–200 cm)
Machine Parameters	Max. Speed	~ 10 mph (16 km/h)
	Typical Range <sup>2</sup>	13.8 mi (25 km)
	Max. Climbing Angle	~ 15°
	Beginner Mode	Can be disabled or enabled via App after 0.6 mi (1 km) of riding.
	Applicable Terrain	Pavement, packed dirt, slopes < 15°, obstacles < 0.4 in (1 cm), gaps < 1.2 in (3 cm)
	Operation Temp.	14–104°F (-10–40°C)
	Storage Temp.	-4–122°F (-20–50°C)
	IP Rating	IP54
Battery	Nominal Voltage	54.3 VDC
	Max. Charging Voltage	59.5 VDC
	Charging Temp.	32–104°F (0–40°C)
	Nominal Capacity	310 Wh
	Continuous Discharge Power <sup>3</sup>	1000 W Max
	Smart BMS	Overvoltage / Undervoltage / Short Circuit / Overheating Protection, Auto-Sleep / Wake-up / Detailed battery information can be checked with the Ninebot App
Motors	Nominal Power	400×2 W
	Max. Power	800×2 W

[1] Mainframe height: distance from the ground to the highest part of the mainframe.

[2] Typical Range: tested while riding under full power, 154 lbs (70 kg) load, 77°F (25°C), 9.3 mph (15 km/h) average speed on pavement.

[3] Continuous Discharge Power: tested while under full power at 77°F (25°C). The value changes with temperature and remaining battery capacity. For example, the continuous discharge power drops to ~80% of the maximum value at 10% remaining battery capacity, and the continuous discharge power drops to ~70% of the maximum value at 32°F (0°C).

NOTE: The tilde symbol (~) indicates that the following number is an approximation.

Charger	Model Number	XVE-5950200	HT-A10-120W-59.5V
	Manufacturer	Jin Xin Yu Power (Shenzhen) Supply Co., Ltd.	Chingmi (Beijing) Technology Co., Ltd.
	Supplier	Ninebot (Tianjin) Tech Co., Ltd.	Chingmi (Beijing) Technology Co., Ltd.
	Nominal Power	120 W	120 W
	Input Voltage	100–240 VAC @ 50/60 Hz	100–240 VAC @ 50/60 Hz
	Output Voltage	59.5 VDC	59.5 VDC
	Output Current	2 A	2 A
	Charging Temp.	32–77°F (0–25°C)	32–104°F (0–40°C)
	Charge Time	4 hours	4 hours
	Compliance	CCC / FCC / UL	FCC / UL

## 14 Trademark and Legal Statement

Ninebot™ and the shape icon are trademarks of Ninebot Inc.; Segway® is the registered trademark of Segway Inc.; Ninebot by Segway™ is a trademark of Segway Inc.; iPhone and iOS, that of Apple Inc.; Android, that of Google Inc. The respective owners reserve the rights of their trademarks referred to in this manual.

Ninebot is the owner or licensee of various patents relating to Ninebot personal transportation robots, with other patents pending. This manual is prepared by Ninebot who reserves all its copyrights. No institute or individual shall copy or disseminate this manual in whole or in part, or make use of the aforesaid patents without the consent of Ninebot in writing.

The miniPRO is covered by U.S. and foreign patents. For patent information go to <http://www.segway.com>. Ninebot (Tianjin) Technology Co. Ltd. manufactures and sells the miniPRO under a license from DEKA Products Limited Partnership.

We have attempted to include descriptions and instructions for all the functions of the miniPRO at the time of printing. However, your miniPRO may differ slightly from the one shown in this document. Visit the Apple App Store (iOS) or the Google Play Store (Android) to download and install the Ninebot by Segway App.

Please note that there are multiple Ninebot by Segway models with different functions, and some of the functions mentioned herein may not be applicable to your unit. The manufacturer reserves the right to change the design and functionality of the miniPRO product and documentation without prior notice.

**All rights reserved. Copyright Segway 2016.**

## 15 Certifications

### Safety

- Cells and battery pack have passed UN/DOT38.3 test and certification
- 2014/35/EU: EN 60950-1:2006/A2:2013
- UL 60950-1, Ed. 2 (2007) + AM1 + AM2
- UL 1642
- UL 2272

### EMC

- FCC part 15 subpart c
- FCC part 15.247
- 2014/30/EU: EN 61000-6-1:2007, EN 61000-6-3:2007/A1:2011
- 1995/5/EC: ETSI EN 300 328 V1.8.1 (2012-06); ETSI EN 301 489-1 V1.9.2 (2011-09); ETSI EN 301 489-17 V2.2.1 (2012-09)
- SAR: EN 62479:2010

### Other

- REACH: 2012/19/EU
- EN 60034-1:2010/AC:2010

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### CAN ICES-3 (B)/NMB-3(B)

Ninebot is not responsible for any changes or modifications not expressly approved by Ninebot. Such modifications could void the user's authority to operate the equipment.

FCC ID: 2AF2B-NB  
IC: 20915-NB01  
Model Number: N3M320

## 16 Contact

Contact us if you experience issues relating to riding, maintenance and safety, or errors/faults with your miniPRO.

### Segway Inc.

14 Technology Drive, Bedford, NH 03110

Tel: 1-603-222-6000

Fax: 1-603-222-6001

Toll Free: 1-866-473-4929

E-mail Sales: [customeroperation@segway.com](mailto:customeroperation@segway.com)

E-mail Service: [technicalsupport@segway.com](mailto:technicalsupport@segway.com)

Website: [www.segway.com](http://www.segway.com)

Have your miniPRO's serial number on hand when contacting Segway.

You can find your serial number at the top of the steering bar between the knee pads or in the App under More Settings → Basic Information.

[www.segway.com](http://www.segway.com)



